



Check that the power is off before beginning any work on the luminaire; All work must be done by qualified, accredited personnel.

Installation recommendations and advice:

1 - All lighting columns must be connected to the earth in accordance with standard NF C 17-200, regardless of the class of equipment used with them. For class 2 insulating lighting columns (e.g. wood or wall-mounted versions), make sure there is electrical continuity between the mechanical interface of the luminaire and the earth connection.

2 - Do not install electronic ballasts with ferromagnetic ballasts on the supply to the same line.


3 - Check the quality of the power network, the equipment and the connections, in order to avoid a neutral break or the presence of poorly insulated devices among others.

4 - Size the systems that protect the installation on the basis of the number of luminaires and the inrush current, and avoid those that generate arcs when switched on or off.

5 - As far as possible, install a centralised surge protection box on each line supply cabinet and at the foot of the pole. These additional precautions are relative and not absolute.

1 - INSTALLATION ON THE POLE


1.1 - Place the luminaire on the pole

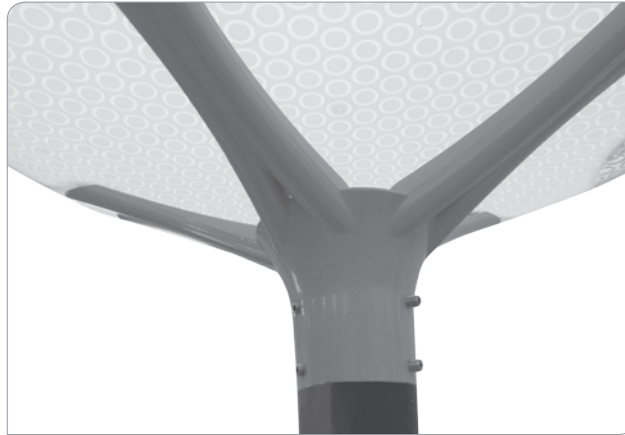

1.2 - The arm where CHAUSSEE is mentioned must be positioned PERPENDICULAR to the Road or area to be lighted



1.3 - Tighten the 6 screws type M8 with a 4-mm Allen key
Tightening torque: 6N.m

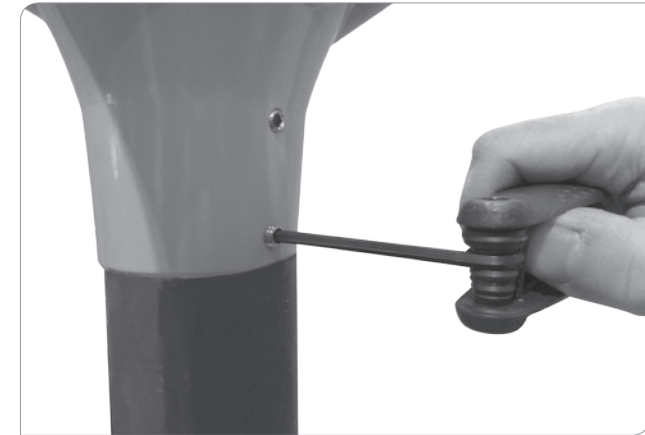

2 - POWER SUPPLY CONNECTION

